

Industrial Conveyor Specialists

Installation, Maintenance & Parts Manual For

MODEL 200 Power Turntable

For Additional copies of this manual, please visit our website at www.titanconveyors.com

Go to Info Center, Select the Maintenance Manual Tab and select the manual for your model conveyor or click on the link below.

https://www.titanconveyors.com/info-center#823236-maintenance-manuals



Titan Conveyors
735 Industrial Loop Road
New London, WI 54961
920-982-6600
800-558-3616
FAX 920-982-7750

E-mail: sales@titanconveyors.com Website: www.titanconveyors.com

Serial No.

ALTAN TATAN TATAN

TITAN MODEL 200 MANUAL Table of Contents

Page 2	Table of Contents
	Warranty
Page 3	Safety/Safety Decals
Page 4	Introduction
	I. Receiving
	II. Installation
	Support Assembly
Page 5	Component Checklist
	III. Maintenance
	Motors
Page 6	Reducers
Page 8	Bearings
	Chain & Sprockets
Page 9	Model 200 Blow Apart Drawing



- (A) Seller warrants that the material in and the workmanship on the equipment manufactured by TITAN will be free from defects at time of shipment. If during the first year from the date of shipment, the Buyer establishes to the seller's satisfaction that any part or parts manufactured by TITAN were defective at the time of shipment, TITAN will, at its own expense, repair or replace (but not install) replacement parts. For a time purpose of this warranty, one year will constitute 2080 hours of operation based on an 8 hour day. Sellers liability under this warranty is limited to replacement parts only and the seller will make no allowance for corrective work done unless agreed to by the seller in writing. Charges for correction of defects by others will not be acceptable, unless so authorized in writing, prior to the work being performed, by an officer of the company. Damage caused by deterioration due to extraordinary wear and tear (including, but not in limitation, use said equipment to handle products of a size, weight and shape or at speeds or methods which differ from information originally provided), chemical action, wear caused by the presence of abrasive materials or by improper maintenance or lubrication or improper storage prior to installation, shall not constitute defects. Failure to install equipment properly shall not constitute defects. Warranty does not cover consumable items. Warranty does not cover belt tracking or adjustment at installation or periodic adjustment that may be required during normal operation. Refer to the maintenance manual for belt tracking instructions.
- (B) Seller has made no representation, warranties, or guarantees, expressed or implied, not expressly set forth on above paragraph. Seller shall not be liable hereunder for any consequential damages included but not in limitation, damages which may arise from loss of anticipated profits or production or from increased cost of operation or spoilage of material.
- (C) The components used in manufacture of said equipment which were manufactured by others will carry such manufacturers' customary warranty, which seller will obtain for buyer upon request.
- (D) No representative of TITAN has been conferred with any authority to waive, alter, vary or add to the terms of warranty state herein, without prior authorization in writing executed by an officer of the company.
- (E) The foregoing is in lieu of any and all other warranties, expressed or implied, or those extending beyond the description of the product.

2

Safety

The Safety alert symbol is used with the signal words





A DANGER, A WARNING and A CAUTION to alert you to safety messages.

They are used in safety decals on the unit and with proper operation and procedures in this manual. They alert you to the existence and relative degree of hazards.

Understand the safety message. It contains important information about personal safety on or near the conveyor.



POTENTIALLY HAZARDOUS SITUATION which if not avoided, could result in death or serious injury.



POTENTIALLY HAZARDOUS SITUATION which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



POTENTIALLY DESTRUCTIVE SITUATION which if not avoided, may result in damage or reduce the longevity of the equipment.

Safety Decals

ALWAYS replace missing or damaged Safety Decals.

Operational Safety



Keep Hands, feet, hair and loose clothing away when conveyor is running



ALWAYS keep hands away from conveyor while moving.



NEVER climb, sit, walk or ride on conveyor



ALWAYS lock out power before servicing.



ALWAYS lock out power before servicing to avoid electrical shock.



AND LOOSE CLOTHING AWAY WHEN CONVEYOR **IS RUNNING**

ALWAYS keep hands, feet, hair & loose clothing away.



ALWAYS keep hair and loose clothing away.



ALWAYS read and follow warning labels.



Never run conveyor without quards in place.



DO NOT run conveyor with guard off.

3

HIZAN HIZAN

INTRODUCTION

The management and employees of Titan Industries thank you for specifying Titan equipment. This manual will give you the basic information to install and maintain your equipment. If special circumstances or questions come up call Titan at 920-982-6600.

I. RECEIVING

Upon delivery of your Titan conveyor, check the packing slip or bill of lading accompanying the unit. If any components are missing, contact Titan IMMEDIATELY with a description of the missing components along with the conveyor serial number(s). The serial number is found on the serial plate normally positioned by the drive.

Check the unit(s) over carefully upon arrival for damage. If you find any damage note it on the bill of lading. **YOU MUST** also file a claim **IMMEDIATELY** with the carrier.

II. INSTALLATION



WEAR SAFETY GLASSES, SAFETY SHOES, AND GLOVES.



HAVE AREA AROUND INSTALLATION SITE CLEARED OF DEBRIS.



LOCKOUT POWER TO CONVEYOR(S) UNTIL START-UP.



LOOK OUT FOR SHARP EDGES WHILE HANDLING CONVEYOR COMPONENTS.



BE CAREFUL IN AND AROUND THE CONVEYOR(S) DURING INSTALLATION. ALSO, BE AWARE OF OTHERS IN THE AREA.



ONLY ALLOW QUALIFIED PERSONNEL TO ASSEMBLE AND INSTALL CONVEYORS.

SUPPORT ASSEMBLY

Standard supports are always shipped assembled. See *FIGURE 1* for a component breakdown.

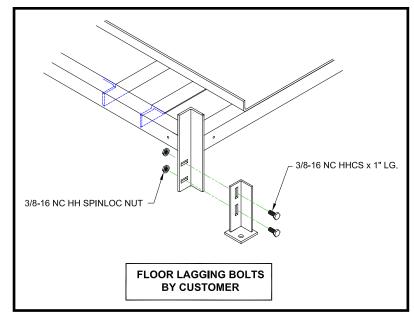


FIGURE 1





IN ORDER FOR THE CONVEYOR TO BE STABLE, THE SUPPORTS MUST BE LAGGED TO THE FLOOR OR SUPPORT STRUCTURE. THIS IS THE CUSTOMER **RESPONSIBILITY!!**

COMPONENT CHECKLIST

Prior to start up use the following list to double check the conveyor components.

MOTOR

Have a qualified electrician ensure the motor is wired correctly for your power source.

Check that motor is securely fastened to the reducer or motorbase.

REDUCER Check that the proper amount of oil is in the reducer.* Make sure a vent plug is

installed on the reducer.* (A solid plug is usually installed for shipping.)See FIGURE 10.

BEARINGS Double check that bearings are fastened securely. Be sure that locking collars are

tightened and set screws are secured firmly to the shaft.

GENERAL Check that sprockets with chain and/or sheaves with V-belt are aligned and properly

tensioned.*

III. MAINTENANCE

MOTORS

- 1. CLEANING All motors should be kept free of dirt and grease accumulations. Open motors should be periodically vacuumed to remove dust and dirt from the windings.
- 2. **VENTILATION** For best results motors should be operated in an area where adequate ventilation is available.
- **TEMPERATURE** Most of todays smooth body T.E.N.V. and T.E.F.C. Motors run hot to the touch. As long as maximum ambient temperatures are not exceeded, and more importantly, ampere draw is within the allowable range, there should be no need to worry. (Both of these limits are found on the motor nameplate.)
- **LUBRICATION** Most electric motors are lubricated for life and under normal conditions require no more lubrication. Under severe conditions where additional lubrication is required, use the following chart as a guide.



THE FOLLOWING CHART IS BASED ON MOTORS WITH GREASE LUBRICATED BEARINGS, RUNNING AT SPEEDS OF 1750 R.P.M. OR LESS, AND OPERATING WITHIN AN AMBIENT TEMPERATURE RANGE OF BETWEEN 0 DEGREES F. TO 120 DEGREES F.

CONDITION	LUBRICATING FREQUENCY
Normal 8 hr. day Light Loads	2 to 3 years
Heavy 24 hr. Day Heavy Loads Dirty Conditions	1 Year
Extreme Shock Loads High Temperatures	3 to 6 Months

Typical lubricants that can be used:

Chevron Oil Co. - SRI#2 Shell Oil Co. - Alvania #2, Dolium R Texaco Inc. - Premium RB

Gulf Refining Co. - Precision #2 or #3 Mobile Oil Co. - Mobilux Grease #2 Sinclair Refining Co. - A.F.#2

^{*}Additional information available in section III Maintenance.

REDUCERS

The following reducer information is concerned primarily with wormgear reducers. If your conveyor is equipped with another type, refer to the manufacturer's recommendations for installation and maintenance sent along at time of shipment.

1. ASSEMBLE / DISASSEMBLE MOTOR TO REDUCER - Because many of today's motor keyways are cut with a sidemill cutter, the following assembly instructions should be followed to insure a trouble-free fit between motor and reducer. First, place the key into the reducer keyway. Second, line up the motor keyseat with the key and push the motor shaft into the reducer bore. Third, finish assembly be bolting the motor to the reducer flange. This procedure should insure that the key does not slide back in the motor keyseat. See FIGURE 2.

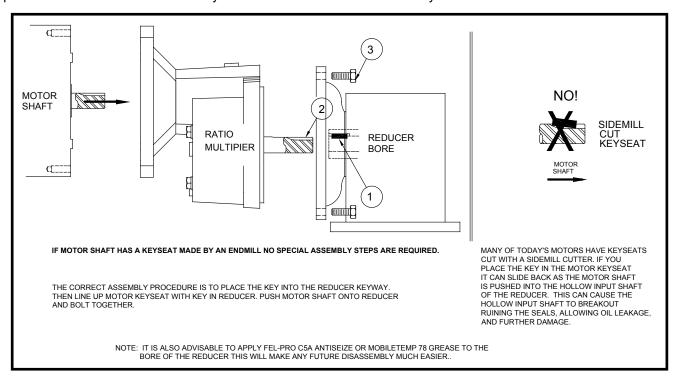


FIGURE 2


- 2. **VENTILATION** During normal operation gear reducers build up heat and pressure that **MUST** be vented to protect the seals and gears. If not installed at Titan, a brass vent plug contained in a small plastic bag, will be put in a box or larger bag along with fasteners sent loose for use during field installation. Remove the top most drain plug (refer to **FIGURE 3**) for the position of your reducer) and install the vent plug securely in place.
- 3. CLEANING After approximately two to three weeks of operation the reducer MUST be drained, flushed out, and refilled to the proper level with fresh oil. (This is done to remove brass particles caused during the normal wear-in period of the worm gear.) Afterwards, the oil should be changed in your reducer every 2500 hours or evey 6 months, which ever occurs first.




WHERE HIGH TEMPERATURES AND/OR DIRTY ATMOSPHERE EXISTS MORE FREQUENT CHANGES MAY BE NECESSARY. PERIODICALLY CHECK REDUCER TO ENSURE THAT THE PROPER LEVEL OF OIL IS IN THE REDUCER. TOO LITTLE OIL WILL CAUSE ACCELERATED WEAR ON THE GEARS. TOO MUCH OIL CAN CAUSE OVERHEATING, SEAL DETERIORATION, AND LEAKAGE.

7/21

Standard Gear Reducer Mounting Positions & Vent Plug, Level and Drain Locations

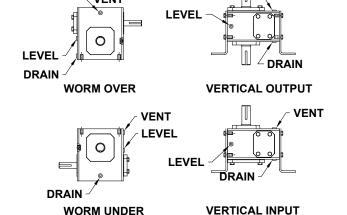

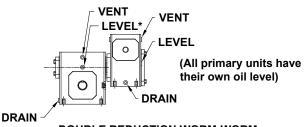

DOUBLE REDUCTION WORM-WORM

* Size 842-860 (far side plug)

Note: High oil level applies to all size 842 & larger secondary & tertiary units regardless of primary unit type.

Oil Capacities (ounces) - Standard Units

Mounting	UNIT SIZE													
Position	813	815	818	821	824	826	830	832	842	852	860	870*	880*	8100*
1 - Worm Over	4	12	12	20	24	40	56	72	112	188	312	35	48	72
2 - Worm Under	8	16	20	28	40	60	84	108	152	304	328	32-3/4	51-1/4	80

^{*} Shipped Dry

WORM UNDER

16 0z. = 1 pint 2 pints = 1 quart 4 quarts = 1 gallon 1 gallon = 128 oz. = 231 Cu. in.

FIGURE 3

- LUBRICATION The precision made gears and bearings in our reducers require high-grade lubricants of the proper viscosity to maintain trouble- free performance. All standard reducers ordered from the factory are filled with ISO viscosity grade Mobil Glygoyle 460 polyalkalene glycol (PAG) lubricant. If oil needs to be added or changed, ONLY compatible polyglycol lubricants should be used. Contact the factory for more information.
- **TEMPERATURE** Most Titan Units are supplied with wormgear reducers. These units may run at temperatures between 100 degrees to 200 degrees F. (Higher temperatures are especially common during start up). There is NO NEED TO WORRY unless temperatures exceed 200 degrees F.
- GENERAL MAINTENANCE Regular inspection to insure the reducer bolts and screws are tight, correct alignment of shaft and/or coupling, no major oil leaks, no excessive heating and no unusual vibration or noise will insure maximum life and performance of the reducer.

BEARINGS

LUBRICATION - Bearings used on Titan Conveyors are normally pre-lubed for life. If customer requested, re-lube bearings are provided, the use of a #2 consistency lithium based grease is advised.

Greasing Frequency should be as many times as necessary to maintain a small film of grease leaking at the seals. This will protect against foreign materials entering the bearing. The following list is provided to aid you in acquiring the proper grease or an equivalent.

NORMAL DUTY	HEAVY DUTY
Texaco - Multifak #2	Sun - Prestige 742EP
Mobile - Mobilux #2	Exxon - Lidok #2EP
Amoco - Lithium MP	Arco - Litholene HEP2
Shell - Alvania #2	Shell <i>-</i> Alvania #2EP

2. REPLACEMENT - If replacement of bearings become necessary remember to clean off the shaft, file smooth grooves or set screw marks, and oil the shaft before slipping on the new bearing.



IF BEARING DOES NOT SLIDE ON EASILY, USE A SOFT METAL BAR TO TAP AGAINST THE INNER RACE TO ASSEMBLE.

GENERAL - Set up a weekly check on all bearings to ensure they remain tightly bolted down, set screws remain fastened securely and are properly lubricated.

CHAIN & SPROCKETS

For longest chain life a constant film or oil is recommended. We recommend a good quality non-detergent petroleum base oil. Use the chart below



SHUT OFF CONVEYOR BEFORE USING OIL CAN OR BRUSH TO APPLY OIL!


TEMPERATURE	RECOMMENDED OIL VISCOSITY					
20 degrees - 40 degrees F	SAE 20					
40 degrees - 100 degrees F	SAE 30					
100 degrees - 120 degrees F	SAE 40					
120 degrees - 140 degrees F	SAE 50					



REMEMBER - ALL GUARDS AND BOTTOM PANS, IF PROVIDED, MUST BE REPLACED BEFORE RUNNING CONVEYOR. TITAN INDUSTRIES IS NOT RESPONSIBLE FOR INJURIES CAUSED BY NOT COMPLYING WITH SAFETY INSTRUCTIONS.



MODEL 200 POWERED TURNTABLE

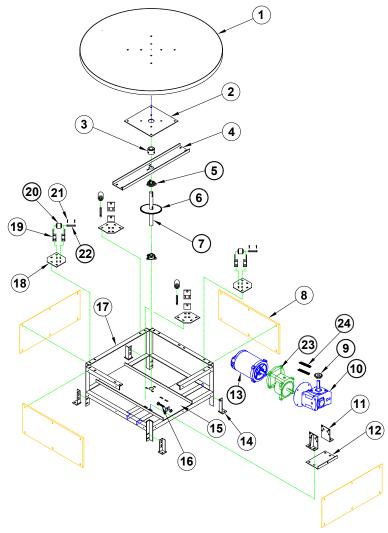

- 1. TURNTABLE
- 2. HUB PLATE
- 3. TURNTABLE HUB
- 4. UPPER BEARING PLATE
- 5. 3 BOLT BEARING
- 6. DRIVE SHAFT
- 7. DRIVEN SPROCKET
- 8. SIDE GUARD
- 9. DRIVE SPROCKET
- 10. **REDUCER**
- 11. REDUCER MOUNTING BRACKET
- 12. REDUCER PUSHER PLATE

- 13. **MOTOR**
- 14. LOWER SUPPORT
- 15. MOTOR BASE
- 16. PUSHER BOLT
- 17. FRAME
- 18. TURNTABLE TOP ROLLER PLATE
- 19. ROLLER BRACKET
- 20. TABLE TOP ROLLER
- 21. COTTER PIN
- 22. HEX SHAFT
- 23. RATIO MULTIPLIER (OPTIONAL)
- 24. ROLLER CHAIN

 RECOMMENDED SPARE PARTS TO BE STOCKED AT YOUR LOCATION